


TOP AND CABINET PARTS

**For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)**

AUTOMATIC
WASHER

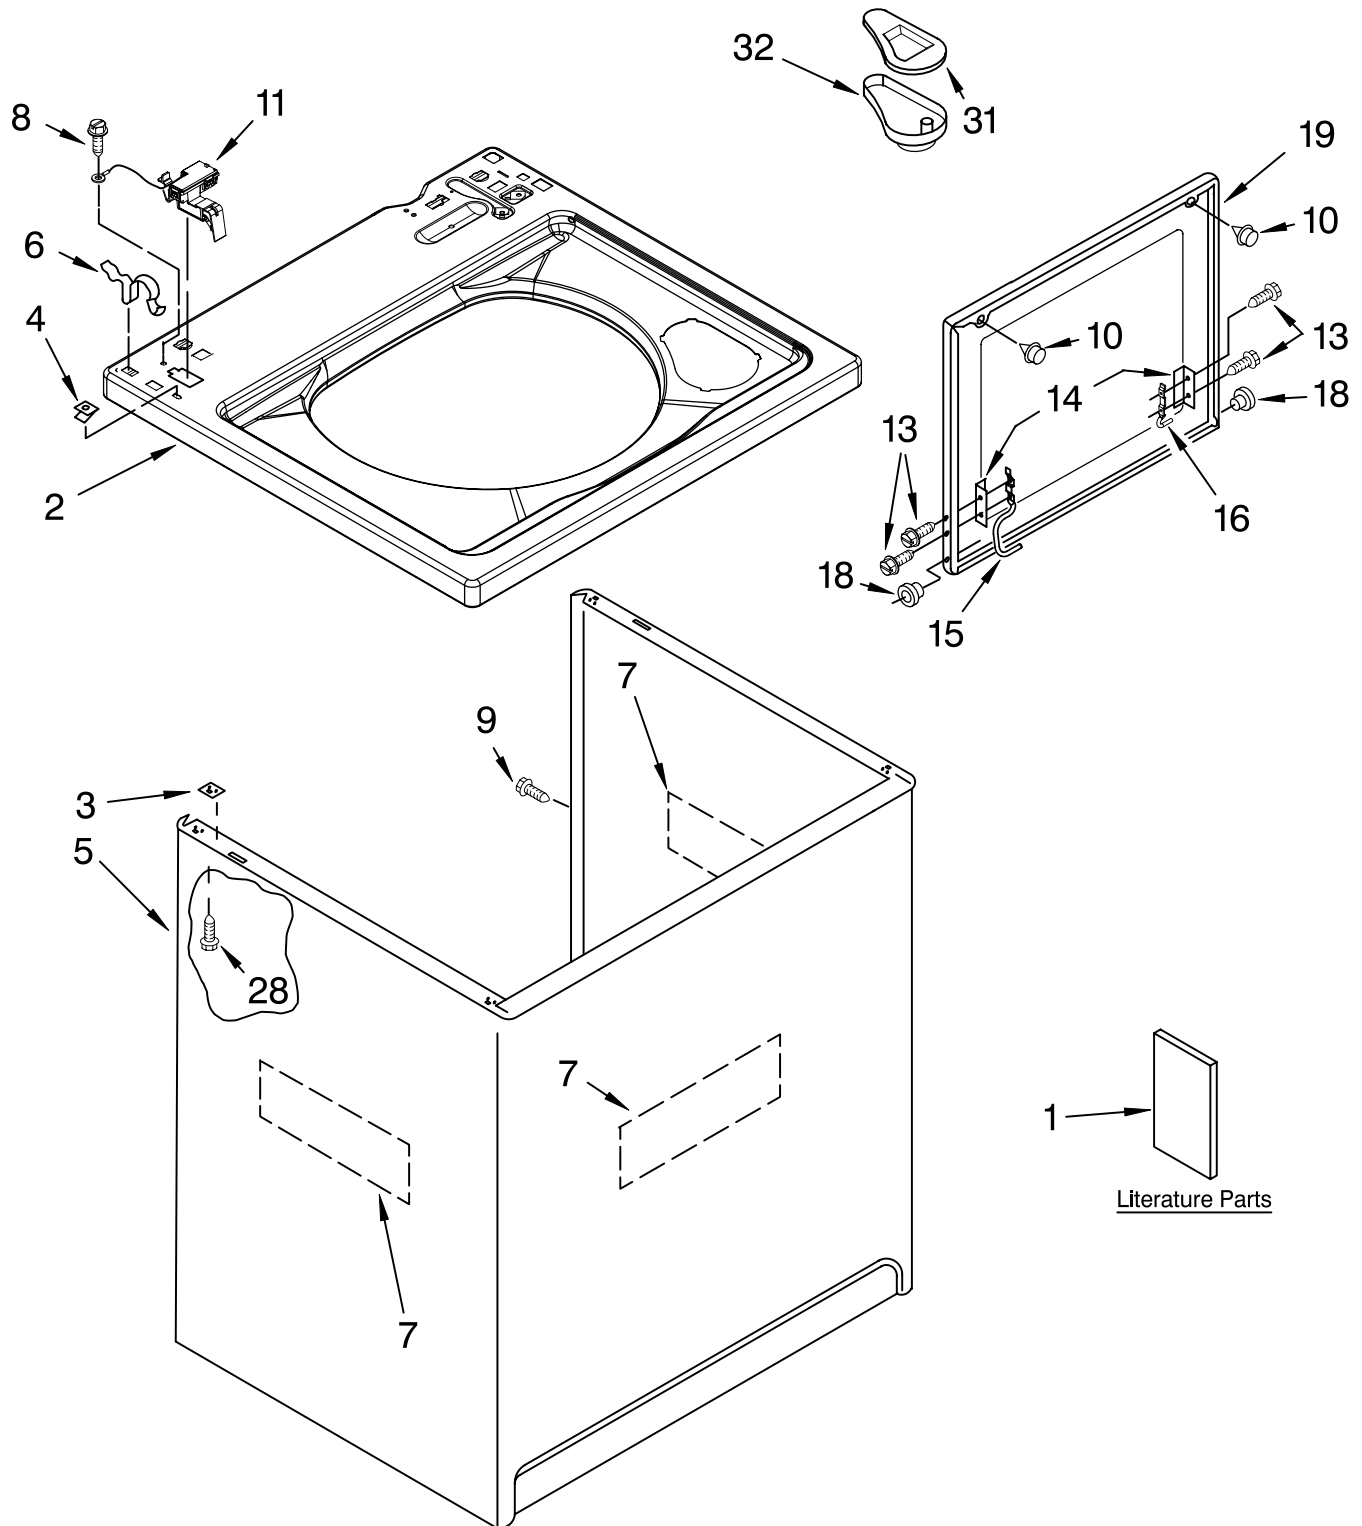

Literature Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	3958075	Installation Instructions
	8578232	Use & Care Guide
	3955907	Feature Sheet
	3957351	Energy Guide
	8566206	Wiring Diagram


Following May Be Purchased

DO-IT-YOURSELF REPAIR MANUALS

	4313896	Manual, Washer
2		Top
	8543451	White
	8543452	Biscuit
3	62750	Spacer, Cabinet To Top (4)
4	357213	Nut, Push-In (2)
5		Cabinet
	63424	White
	3954357	Biscuit
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7	3976348	Cabinet-Sound Damper (3)
8	3351614	Screw, Ground
9	3357011	Screw, 10-16 x 1/2
10	9724509	Bumper, Lid (2)
11	8318084	Switch, Lid
13	355274	Screw, Lid Hinge Mounting (4)
14	21097	Pad, Lid Hinge (2)
15	8559336	Hinge, Lid (L.H.)
16	91770	Hinge, Lid (R.H.)
18	8319539	Bearing, Lid Hinge (2)
19		Lid
	8558398	White
	8558399	Biscuit
28	3390631	Screw, 10-16 x 3/8 (4)
31	3955788	Cover, Dispenser
32	8519517	Dispenser, Bleach

CONTROLS AND REAR PANEL PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

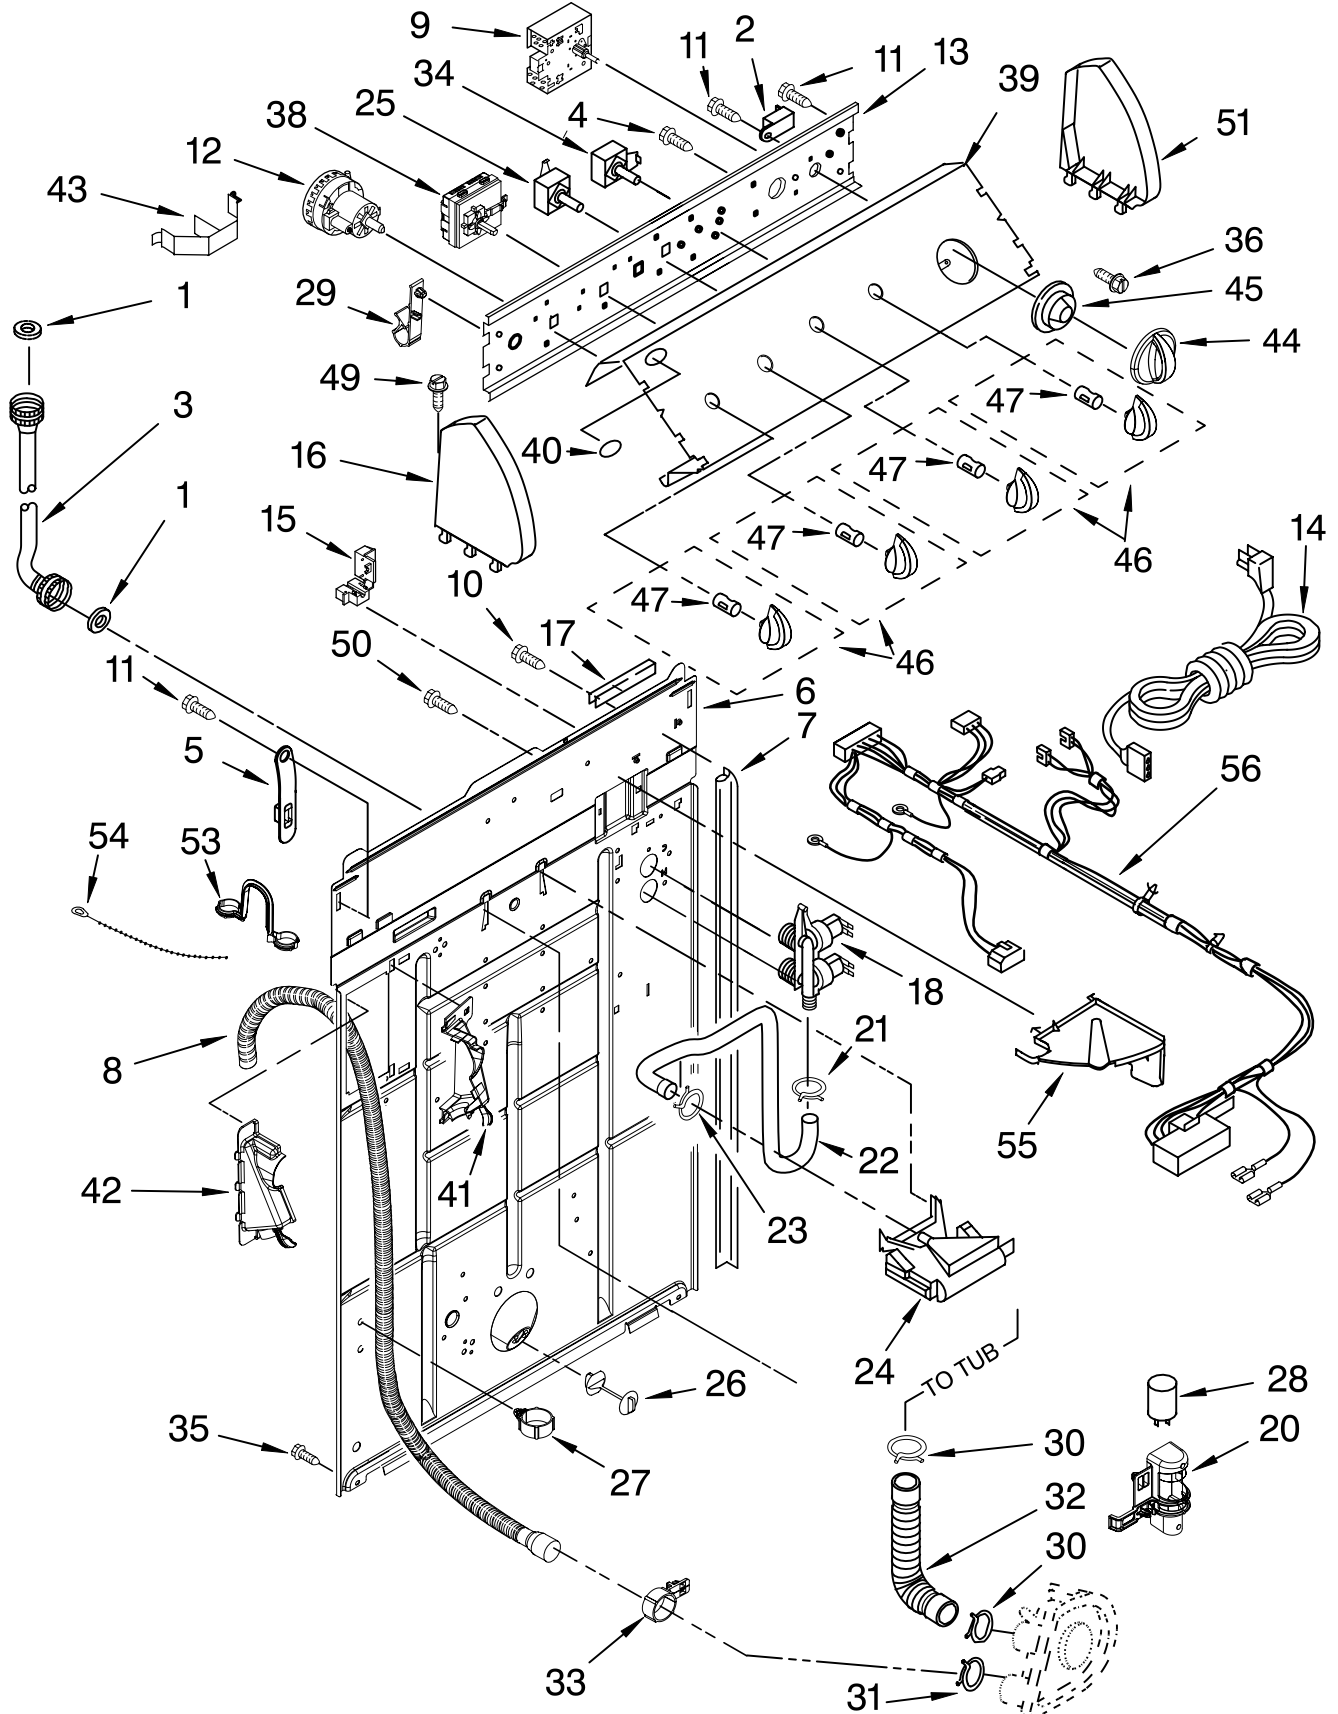

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROLS AND REAR PANEL PARTS



For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3976300	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)	18	3979347	Valve, Water Inlet & Thermistor Assy.	42	8541658	Bucket, Drain Hose (Right Half)
2	694419	Mini, Buzzer	20	8318046	Clip, Capacitor	43	8055003	Clip, Harness & Pressure Hose
3		Hose, Water Inlet (2)	21	301958	Clamp, Hose	44		Knob, Timer
	8571377	Blue Coupler	22	8317974	Hose, Vacuum Break		8544945	Silver
	8571378	Red Coupler	23	370450	Clamp, Hose		8544946	Biscuit
4	3400073	Screw, Ground	24	387606	Break, Vacuum	45		Dial, Timer
5	8568314	Strap, Console (2)	25	3949180	Switch, Rotary		8544947	White
6	8318015	Panel, Rear	26	8519200	Support, Rear Panel		8544948	Biscuit
7	62747	Pad, Rear Panel	27	8541667	Clamp, Hose	46		Knob, Control
8	8559373	Drain Hose Assembly (Includes Illus. Nos. 27 & 33)	28	8572718	Capacitor, Motor Start		8544937	Silver
9	8541270	Timer, Control (60 Hz.) (Motor Not A Service Part)	29	8317975	Retainer, Harness		8544938	Biscuit
10	3351614	Screw, Ground	30	3363366	Clamp, Hose	47	8536939	Clip, Knob
11	90767	Screw, 8-18 x 3/8	31	8317496	Clamp, Hose	49	388326	Screw, 8-18 x 1.25 (Panel to Top)
12	3366847	Switch, Water Level	32	3951449	Hose, Pump To Tub (Includes Illus. 30)	50	9740848	Screw, 8-18 x 1/2
13	8544893	Bracket, Control	33	8541668	Clamp, Hose	51		Cap, End (R.H.)
14	661661	Cord, Power (Includes Illus. 15)	34	3949188	Switch, Rotary		8271359	White
15	3952821	Strain Relief, Power Cord	35	62863	Screw, 10-16 x 3/8		8271362	Biscuit
16		Cap, End (L.H.)	36	3400818	Screw, Timer Mounting	53	8541672	U-Bend, Drain Hose
	8271365	White	38	8564138	Switch, Water Temperature (ATC)	54	3347868	Cable Tie
	8271368	Biscuit	39		Panel, Console (Includes Illus. 40)	55	8539874	Shield, Suds
17	303294	Edge Protector		3956622	Silver	56	3957276	Harness, Wiring (For Detail See Pages 9 & 10)
				3956623	Gold	FOLLOWING PARTS NOT ILLUSTRATED		
			40	3400985	Medallion			
			41	8541669	Bucket, Drain Hose (Left Half)		3957361	Miscellaneous Parts Bag

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

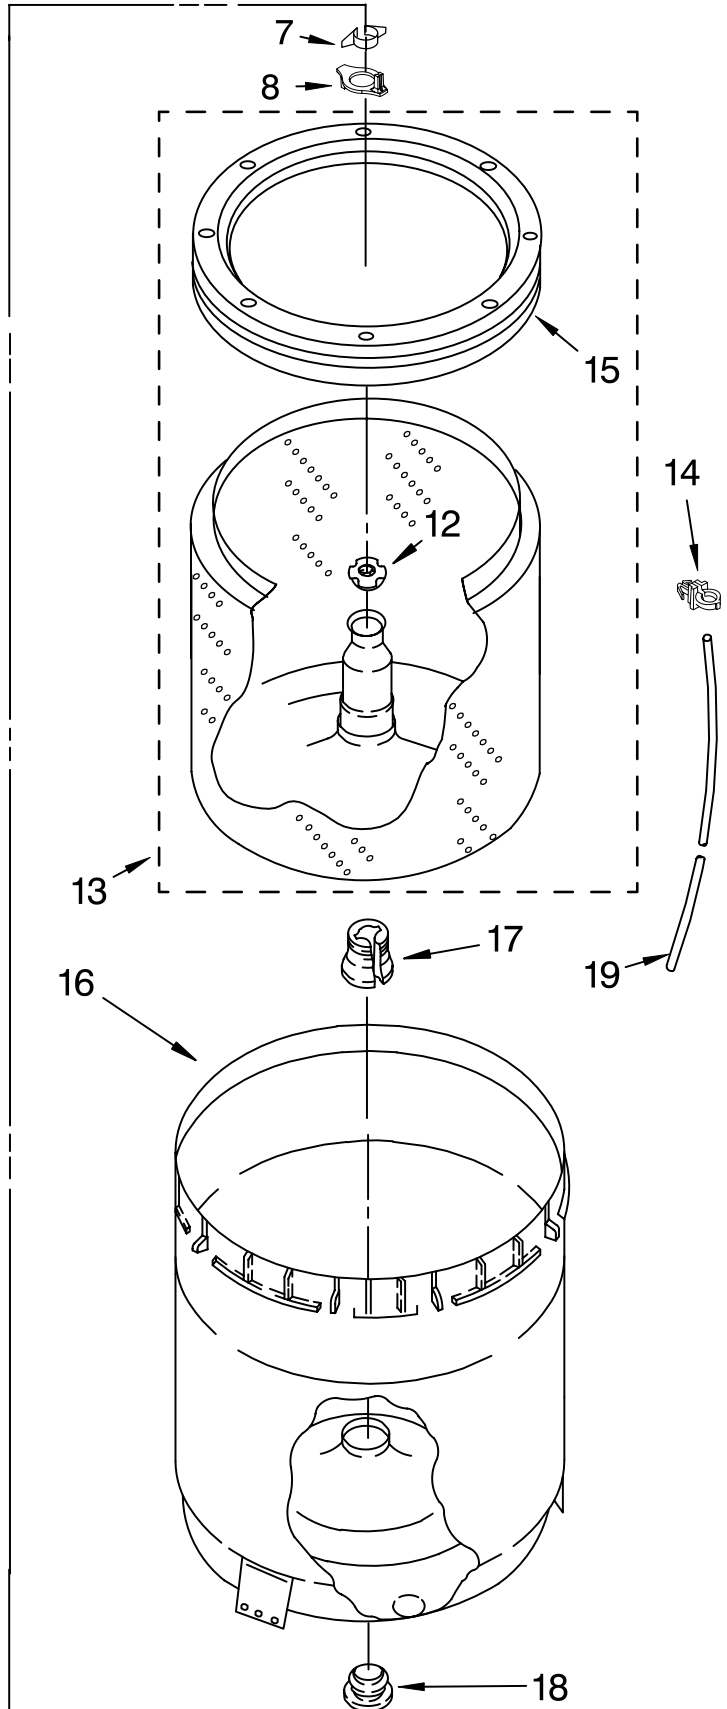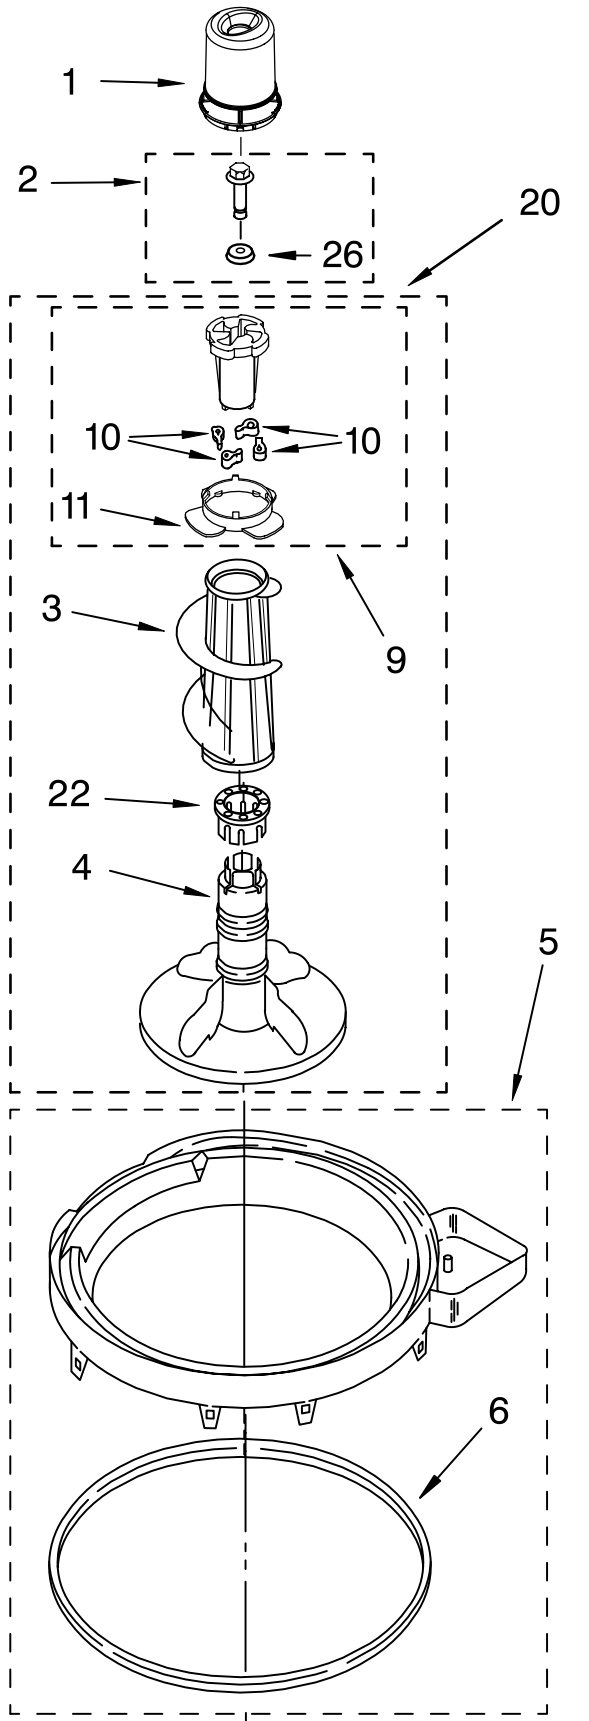

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS


For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
1	8559760	Dispenser, Fabric Softener
2	358237	Screw & Washer (5/16-24 x 1)
3	389141	Auger, Agitator
4	389386	Agitator
5	8528150	Tub Ring & Gasket
6	3976308	Seal, Tub Ring
7	3354845	Clip, Agitator
8	8543666	Washer, Agitator
9	3363662	Cam, Driven
10	3366877	Dog, Agitator Clutch (4)
11	3363661	Bearing-Driven Cam
12	21366	Nut, Spanner
13	8526016	Basket & Balance Ring
14	2219077	Clip, Pressure Switch Hose
15	8519788	Balance Ring
16	63849	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch
20	3347674	Auger & Agitator (Complete)
22	3350389	Spacer, Thrust
26	3949550	Washer

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

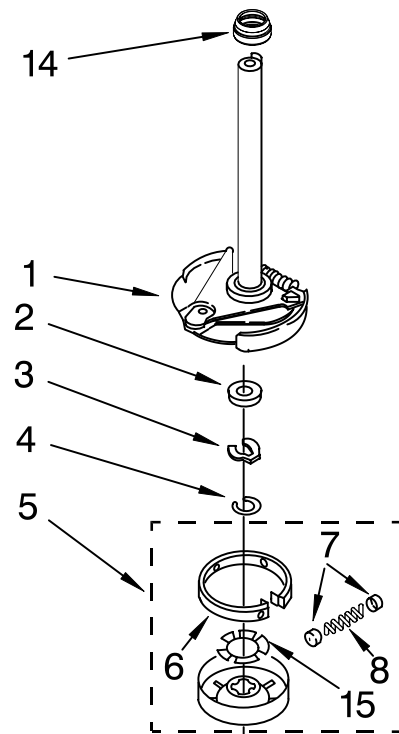

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake & Drive Tube (Complete) (Refer to Page 11 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Page 12 For Further Breakdown)


Illus. No.	Part No.	DESCRIPTION
10	3357334	Screw, Gearcase To Base (3)
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	285753	Coupling, Motor & Isolation
14	8577374	Seal
15	3355454	Clip, Anti-Rattle
16	3400516	Screw
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	8529935	Motor, Main Drive
20	8529896	Switch, Main Drive Motor
21	8546127	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10-16 x 5/8
24	3946532	Shield, Motor

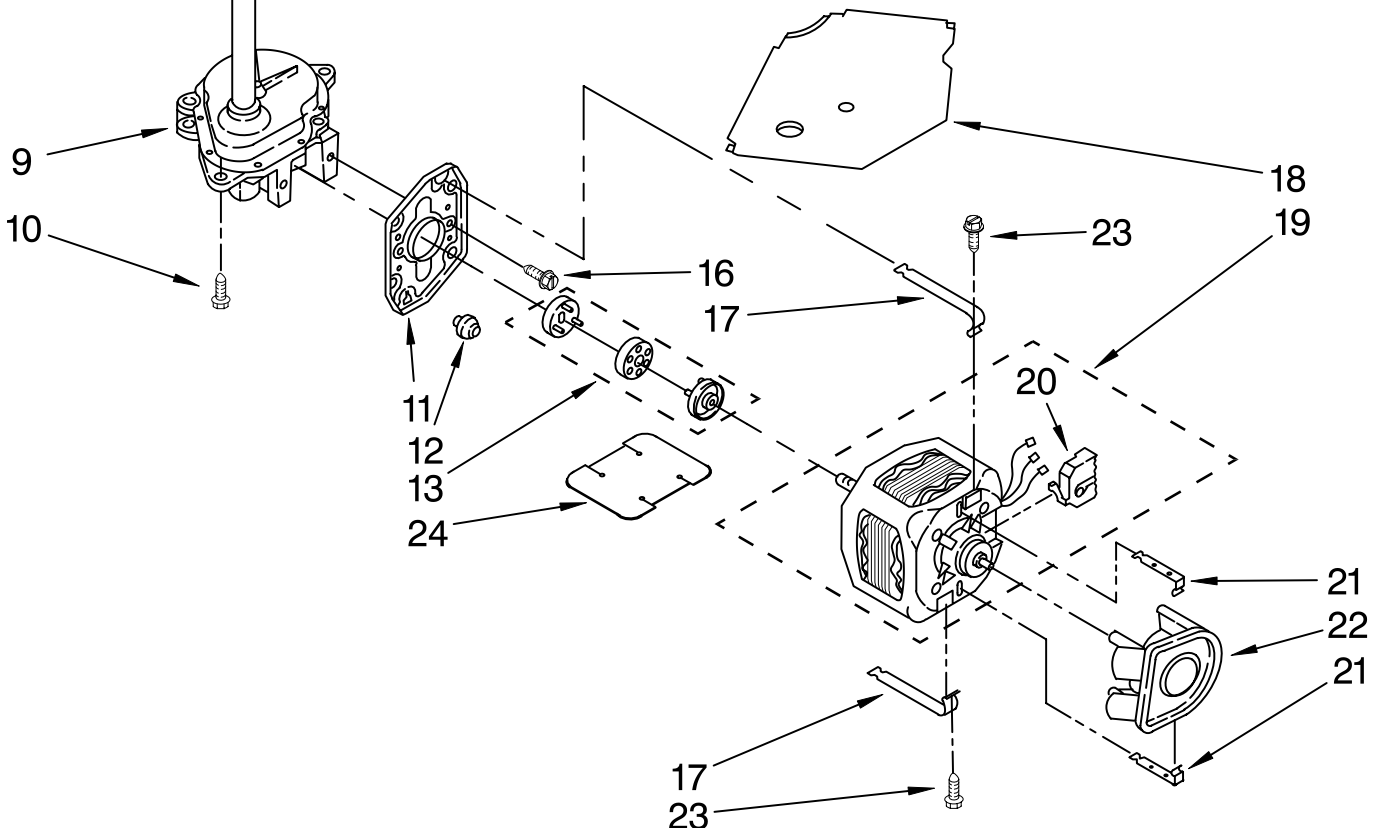

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

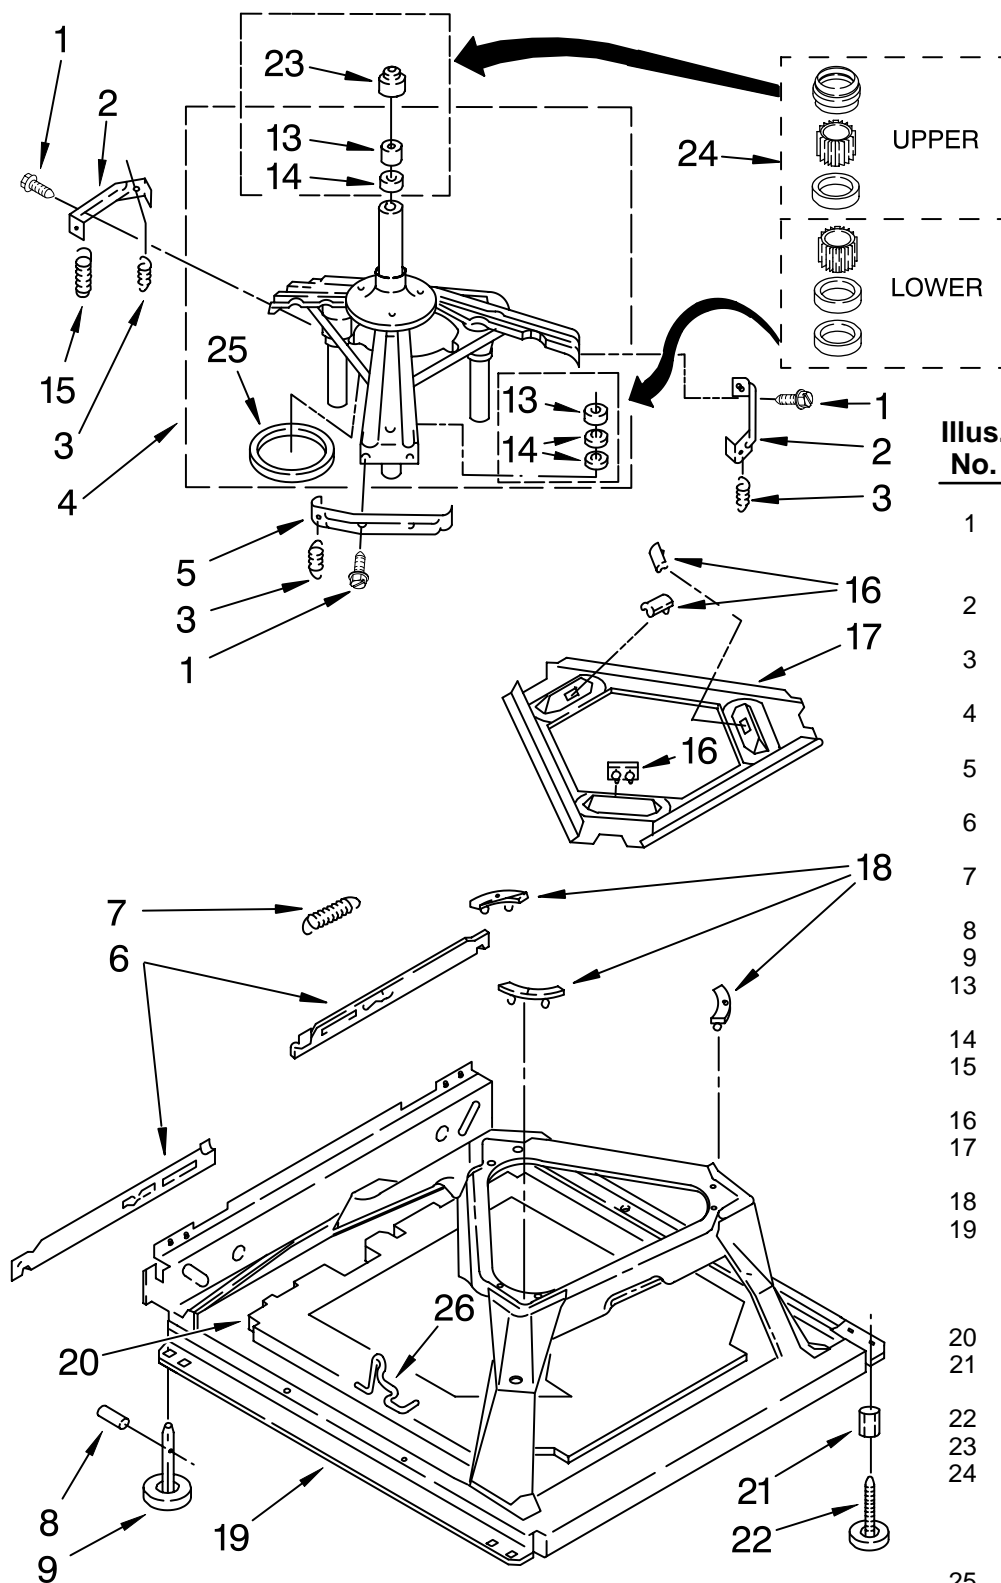


Illus. No.	Part No.	DESCRIPTION
1	3400076	Screw, Bracket Mounting (10-32 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring Suspension, (3)
4	8575214	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	8318050	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension (Includes Illus. 16)
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus. 6, 7, 8, 9, 16, 17, 18, & 26.)
20	8544816	Sound Absorber
21	3359452	Nut, Lock (2) (3/8-16)
22	389102	Foot, Front (2)
23	8577376	Seal, Centerpost
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

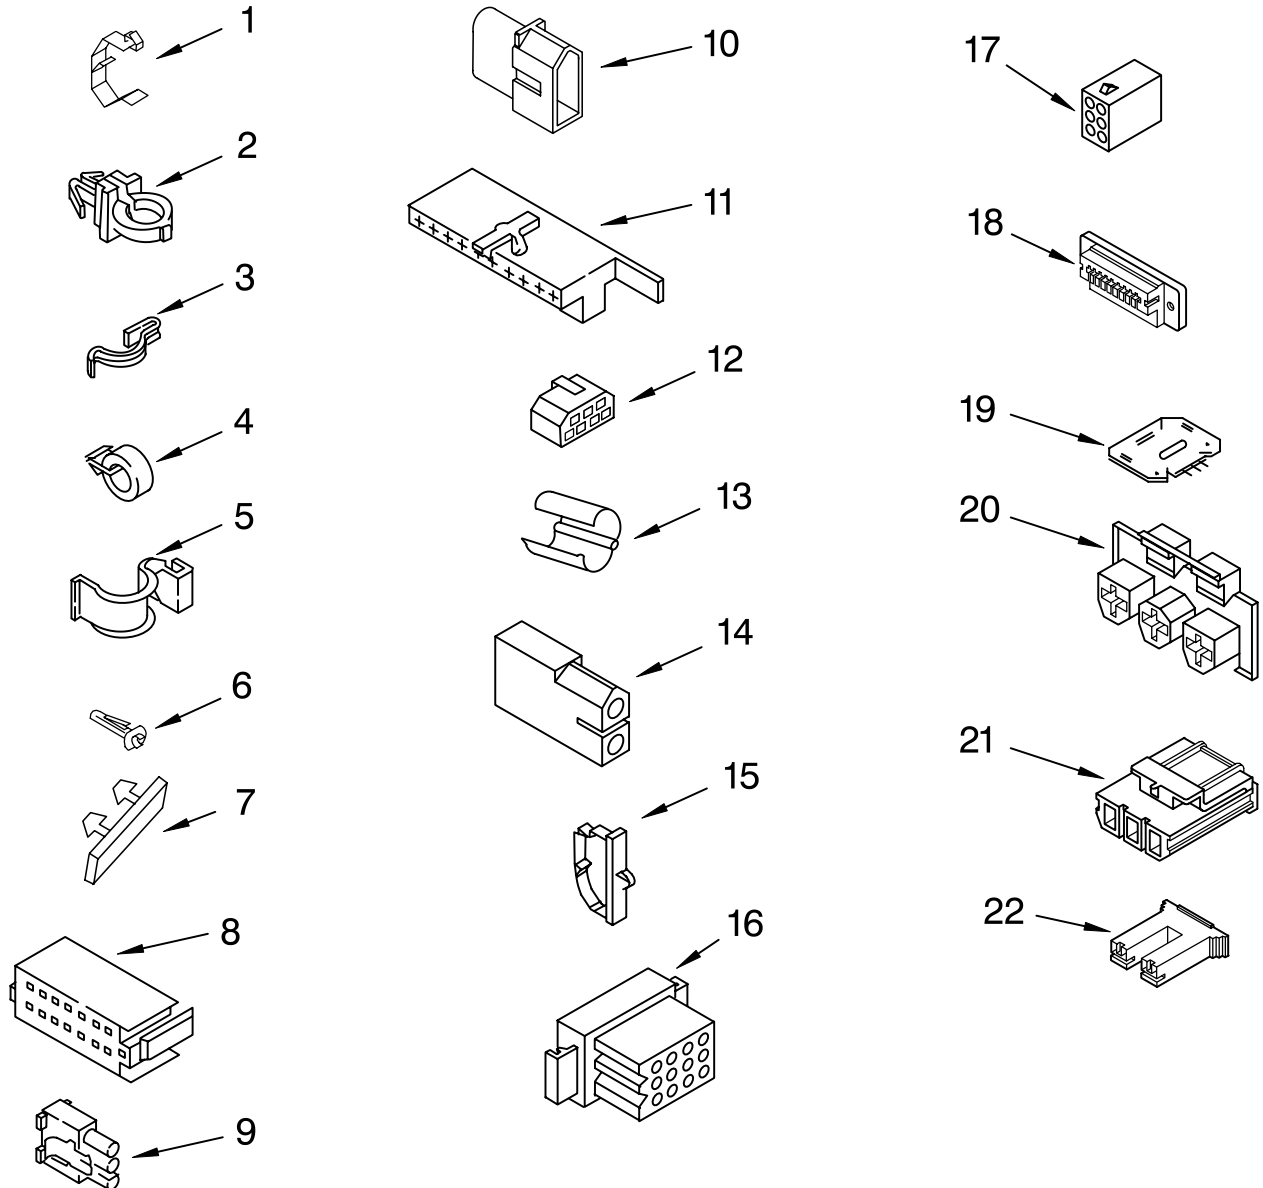

WH2I

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness	10	353424	Plug, Terminal (3-Way) (Power Cord) (Use Term.94613)	17	3347730	Receptacle (6-Way) (Use Term. 94613)
2	388498	Clip, Harness				18	3349494	Connector, Etc
3	3347812	Clip, Harness	11	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	19	3407125	E.T.C. Control
4	3352501	Clip, Harness	12	3347243	Block, Disconnect (Use Term. 352088)	20	3948617	Connector (T.P.A.) (3-Circuit) (Lid Switch)
5	90016	Clip, Harness	13	63523	Protector	21	3360056	Connector (T.P.A.) (3-Circuit) (Pressure Switch)
6	3390496	Clip, Harness	14	717252	Connector (2-Way) (Use Term.94614)	22		Block, Connector
7	389379	Retainer, (Suds Models) Timer, Block Disconnect	15	3352944	Clip, Harness		3354925	Cold Valve
8	3948614	White	16	3390423	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)		3354926	Hot Valve
	352089	Black						
9	62889	Receptacle, Terminal (3-Way) (Lid Switch) (Use Term.94613) Or 94614.)						


**FOR COMPLETE WIRING HARNESS REFER TO
CONTROL AND REAR PANEL PARTS PAGE**

WH2I

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE AND DRIVE TUBE PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

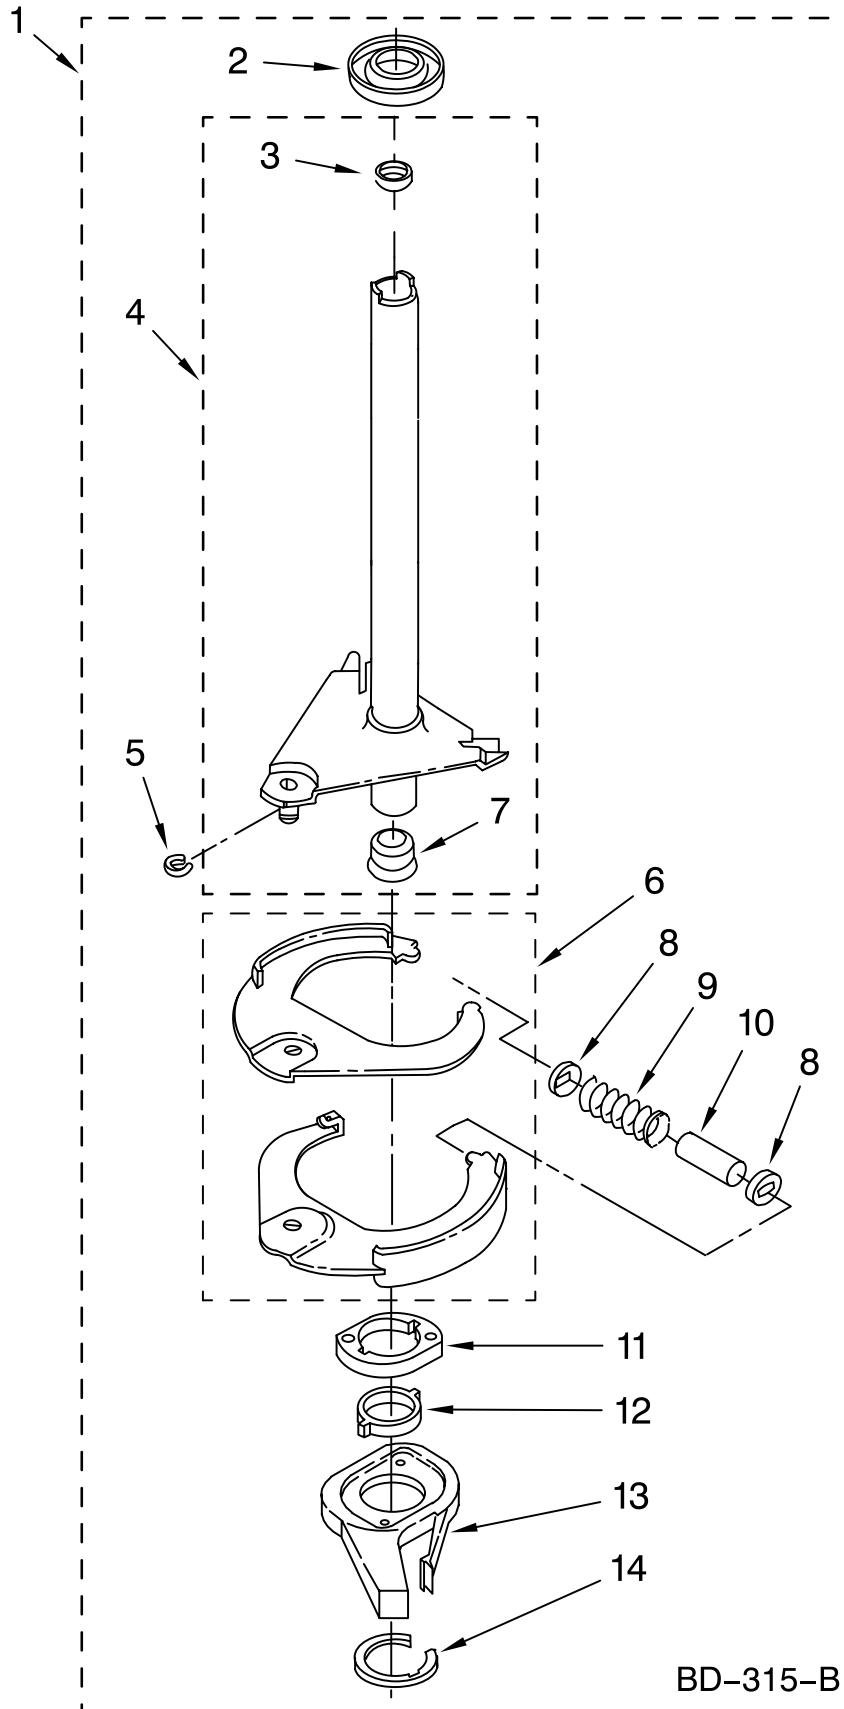

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	356427	Seal, Drive Tube
4	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
5	64035	Ring, Retaining
6	64232	Shoe, Brake (2)
7	62703	"T" Bearing, Spin Tube
8	3353956	Cap, Brake Spring (2)
9	387806	Spring, Brake
10	3355360	Sleeve, Brake Spring
11	661516	Cam, Brake Release
12	63022	Sleeve, Cam
13	64194	Driver, Brake Cam
14	90368	Ring, Retaining


FOLLOWING PARTS
NOT ILLUSTRATED

285208 Lubricant
(Use Only In
Brake Shoe
Assembly On
Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

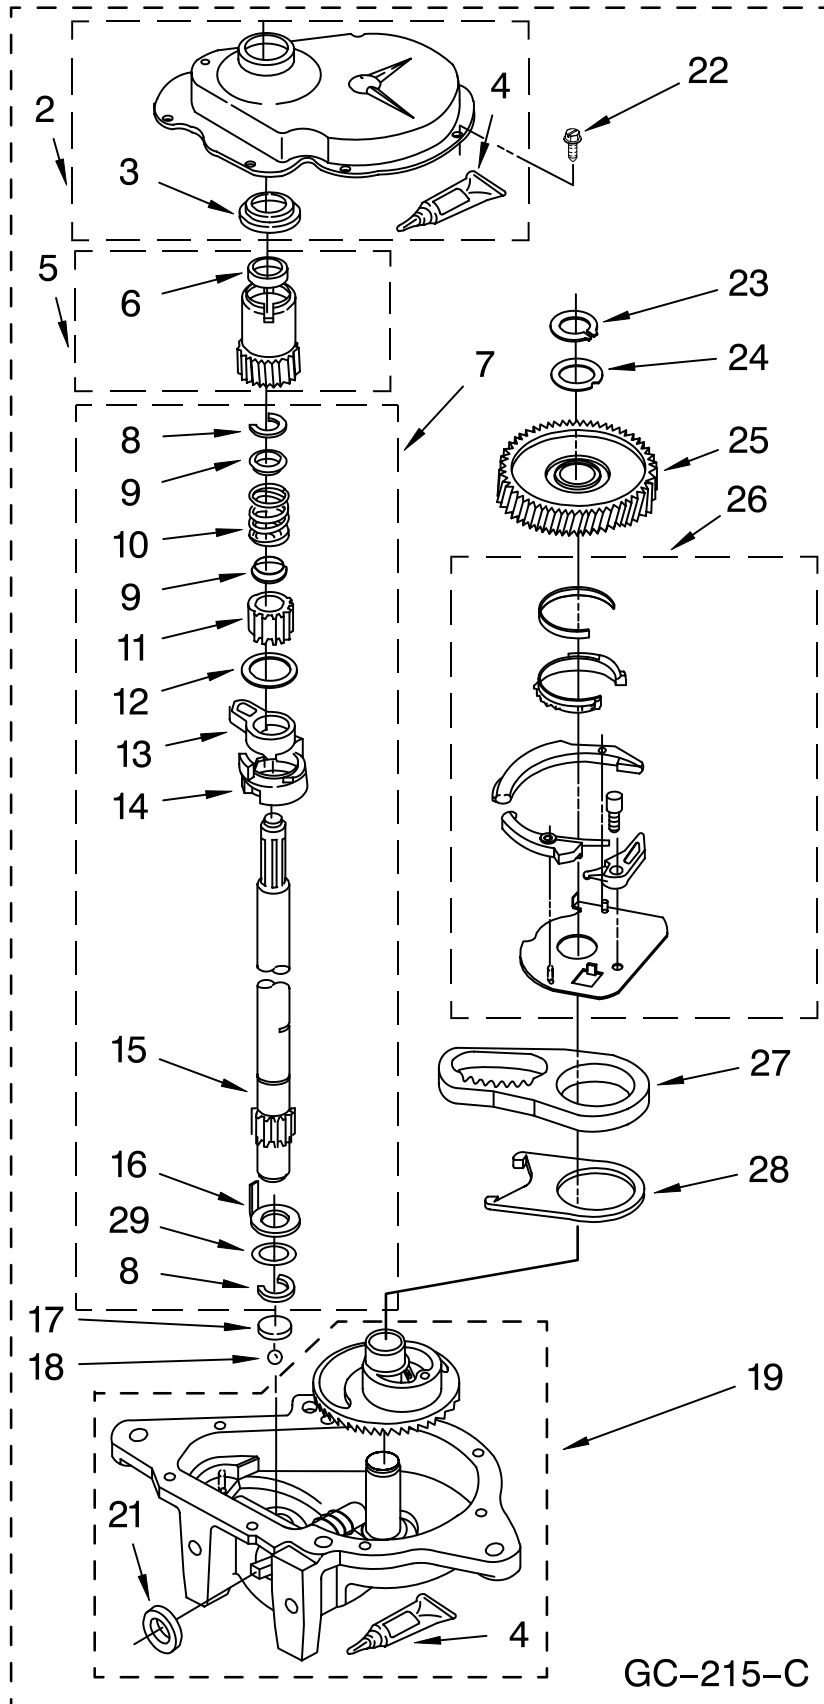




Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting Actuator, Shift
28	62621	
29	388815	Washer, Intermediate

GC-215-C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

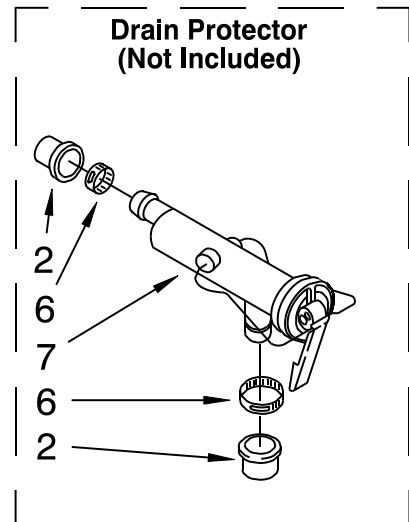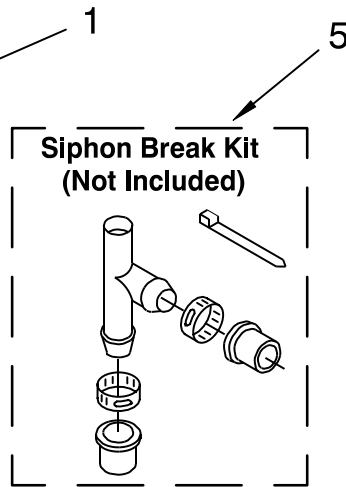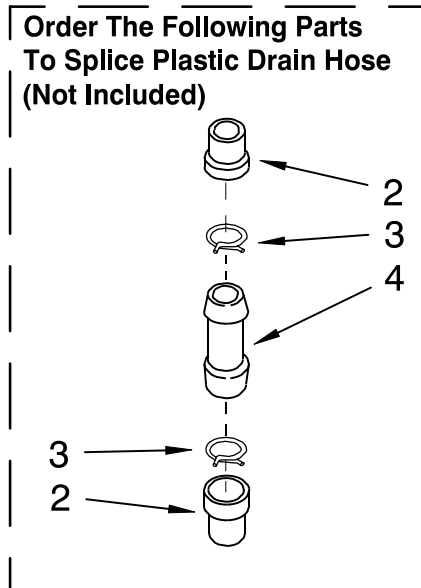

WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: LSQ9650PW4, LSQ9650PG4
(White/Grey) (Biscuit/Gold)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
4392899 Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350938 Primer, Gray
350930 White
4392901 Biscuit

PAINT, BULK (1 qt.)

799344 White (Uncut)
4392900 Biscuit (Uncut)

OIL

350572 Oil, Gearcase
(16 Oz.)

LUBRICANT

285208 Lubricant (Use
Only in Brake
Shoe Assembly
On Roller and
Pin)

SEALER

285195 Sealer, Gasket
(.20 Fl. Oz.) (6 ml)

ACCESSORY PARTS

367031 Drain Protector
285320 Siphon Break Kit